

MLOVE



BV670 Plus

Wireless Speaker

USER MANUAL

01 Precautions

English

- ◆ Please read the instruction first.
- ◆ Please follow the instruction carefully.
- ◆ Please store and use this product at room temperature.
- ◆ Do not use this product near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ◆ Do not block the opening of the speaker, and do not insert objects into the vents or slots of the speaker.
- ◆ Do not throw and drop the product to avoid damages.
- ◆ Please charge the speaker with product rated voltage.
- ◆ If the connection line does not match your device, please contact the dealer.
- ◆ Please keep volumes of the speaker mode rate to avoid temporary or permanent hearing impairment.
- ◆ No matter the equipment is damaged due to any reason, it must be repaired by professional maintenance personnel in time. Unauthorized disassembly will invalidate the warranty.
- ◆ If the battery is not properly replaced, there will be an explosion accident, which can only be replaced with the same type of battery.
- ◆ Do not disassemble, impact, squeeze or throw in to fire; if severe swelling occurs, do not continue to use; Do not place in a high temperature environment, do not use after the battery is soaked in water.
- ◆ Battery (battery pack or combined battery) can not be exposed to such conditions as sunshine, fire or similar over heating conditions.
- ◆ If consumers use a power adapter to charge, they should purchase a supporting power adapter that has obtained CCC certification and meets the standard requirements.

02 Package Content

 
English



1 X Speaker



1 X Wireless Microphone




1 X USB Type-C charging cable



1 X User Manual

03 Keys Functions

 English

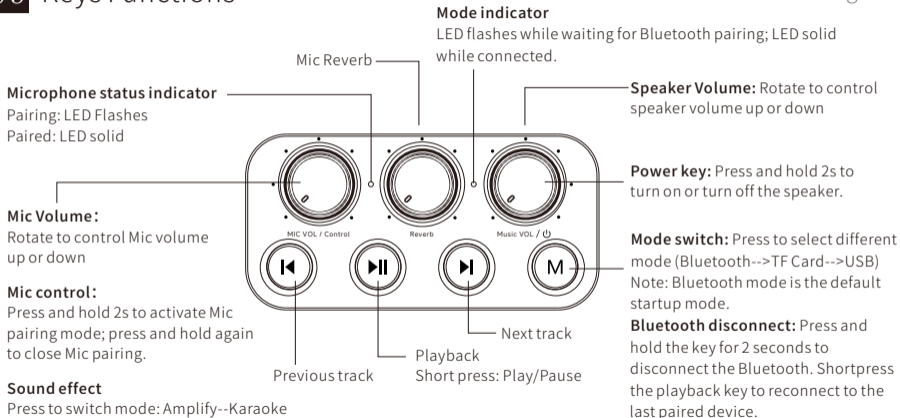


04 Ports Functions

English

USB Sound Card: Power on the speaker, connect the phone or computer with the data cable, press the M key to switch to the USB sound card mode, and you can play the music from your phone or computer with cable.

Built-in reset button:
Press the reset button in the jack with a needle.

 3.5mm wired Mic jack

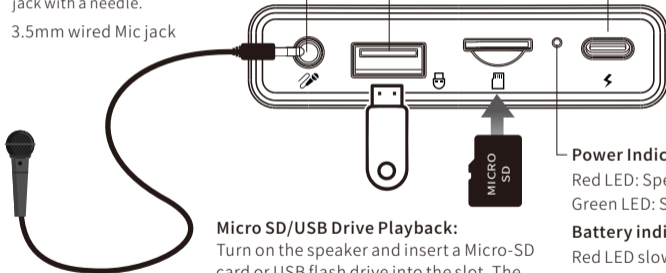

Charging:
Use a USB DC5V-1~3A adapter to charge the device.

Power Indicator Light:
Red LED: Speaker is charging.
Green LED: Speaker is fully charged.

Micro SD/USB Drive Playback:
Turn on the speaker and insert a Micro-SD card or USB flash drive into the slot. The unit will activate the playback source automatically playing the audio files.

Battery indicator:
Red LED slow flash < 10%
10% <= Red < 20% 20% <= Orange < 55%
55% <= Yellow < 75% Green >= 75%

05 Bluetooth Connection

English

1. Turn on the speaker

Press and hold the power key for 2 seconds to turn on the speaker with a prompt sound. Speaker enter Bluetooth pairing mode. The Bluetooth LED indicator will flash.

2. Connect to a Bluetooth device

Go to the Bluetooth menu of the device and search for "Mlove BV670 Plus". The indicator light for the mode key will stay on once connected followed by a prompt tone.

Keep the device Bluetooth on, it will automatically connect to the device in next use.

Bluetooth disconnect: Long press M key for 2 seconds to disconnect Bluetooth and clear paired list.



06 Wireless Microphone

 
English

Microphone indicator

Wireless microphone connection: Green LED flashes while pairing, green LED solid while connected. Microphone turns off if no connection set within 30min.


Low battery: Red LED flashes <15%

Charging: Red LED solid while charging, green LED solid after fully charged.

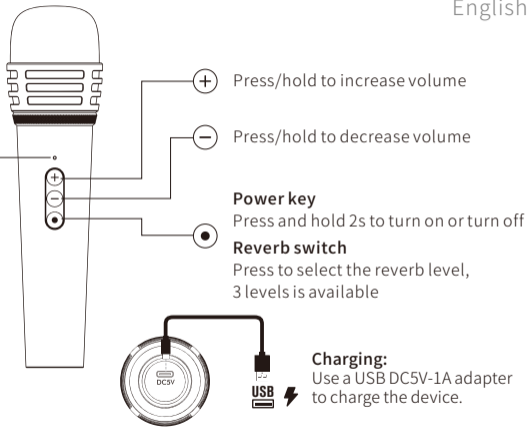

07 Wireless Microphone Connection

 English

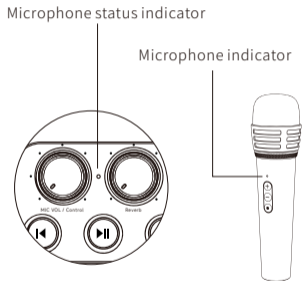

Connecting wireless microphone to speaker

1. Turn on the speaker, start-up status is microphone pairing mode. While the microphone status LED flashes, waiting for wireless microphone to pair.
2. Press and hold the power key for 2 seconds to turn on the microphone. It will search the speaker and connect to it. The microphone indicator and microphone status indicator LEDs stay on after successful connection.

Others

- 01-Speaker supports 2 wireless microphones. Turn on 2pcs wireless microphones, they will pair to the speaker automatically.
- 02-After successful connection, microphone will pair automatically to the speaker with a 30 seconds time limit. If connection failed within 30s time limit, the microphone will go to pairing status.
- 03-The Mic control mode exists if no microphone connects to the speaker within 10min. Press and hold "Mic control" key to activate the function if you need it.

08 Speaker Specifications

English

Basic parameters

Type: Portable Karaoke speaker

Charging: USB DC5V-3A(Max)

Technical parameters

 
Drivers: 4 inch full frequency speaker

Bass enhance: 106*122mm radiator

Formats: MP3/WMA/WAV/FLAC/APE (Micro SD Card/USB drive)

Product size: 160x118x210mm

Product weight: 1.18kg (without microphone)

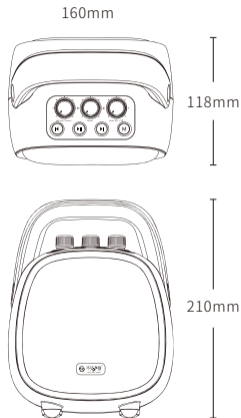

09 Microphone Specifications

English

Basic parameters

Battery: 1500mAh

Charging: USB Type-C DC5V-1A

Charging time: about 3.5h

Product size: 178mm(L)*46.8mm(H)*46.8mm(W)

Product weight: 137g

